

Betti

**GRAN**

S-175

INSTRUCTION  
MANUAL

# IMPORTANT – READ CAREFULLY AND KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

## ⚠ WARNING ⚠

- **TO AVOID INJURY OR DEATH:**
  - FOLLOW THE MANUFACTURER'S INSTRUCTIONS
  - PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER
  - DO NOT LEAVE CHILDREN UNATTENDED
  - DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER
  - MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED
- THIS STROLLER IS SUITABLE FOR A CHILD TO A MAXIMUM OF 18 KG.
- DO NOT LET YOUR CHILD PLAY WITH THIS PRODUCT.
- THIS STROLLER IS NOT SUITABLE FOR RUNNING OR SKATING.
- ALWAYS USE THE RESTRAINT SYSTEM.
- Remove the protective plastic cover before using this article. This covering should be disposed of immediately to avoid danger of suffocation to babies and children.
- This stroller is suitable for a child from birth to 18kgs.
- A basket is provided for the carriage of up to 5kg of items evenly distributed.
- Always engage the brake when placing your child in or taking your child out of the vehicle. Never place child in or take child out of a vehicle on a slope.
- Hanging loads on the handlebar and/or behind the backrest and/or on the sides of the vehicle may affect its stability.
- This vehicle is designed to be used for 1 child only.
- Accessories not approved by the manufacturer should not be used.
- Do not use if parts of the stroller are broken, damaged or missing, and only use spare parts approved by the manufacturer.
- Do not put baby in the stroller when you are on stairs or escalators.
- Do not put the stroller near an open fire or exposed flame.
- There is potential for fingers or parts of the body to be injured when the vehicle is being folded or unfolded, so due care should be exercised.
- The brakes should be applied when the stroller is not moving.
- DO not use replacement parts or accessories other than those approved by the manufacturer as others may render the product unsafe.
- Never leave the harness buckled when not fitted to a child in the stroller because the harness can form loops which may pose a strangulation hazard.
- The stroller is designed for use on flat or gently sloping surfaces and may be unstable on higher sloping and uneven surfaces; users should be made aware of the possibility of the stroller tipping over.
- The maximum load for the accessories bag (in case there is one) is 2 kg.
- The vehicle is not to be used as an unsupervised sleeping environment.
- **WARNING:** USE THIS STRAP TO STOP THE PRAM OR STROLLER ROLLING AWAY.

## ⚠ WARNING ⚠




## PARTS CHECKLIST

### CONTAINED IN YOUR CARTON ARE:


1. 1 x Chassis\*
2. 2 x Front wheels\*
3. 1 x Hood\*
4. 1 x Basket\*

\* These are pre-fitted but are removable.

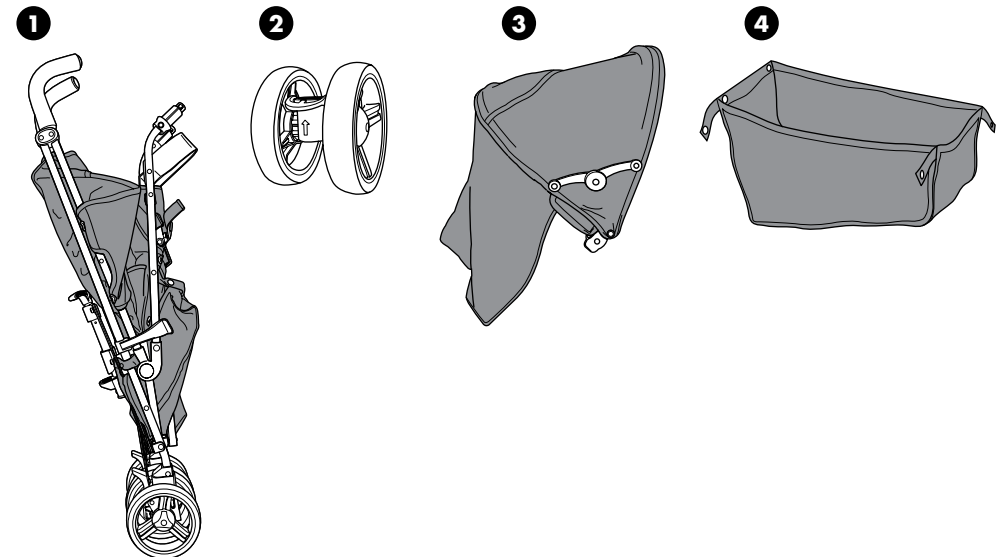


# OPENING THE STROLLER


1. Release the folding lock by lifting the lock off the peg (A).

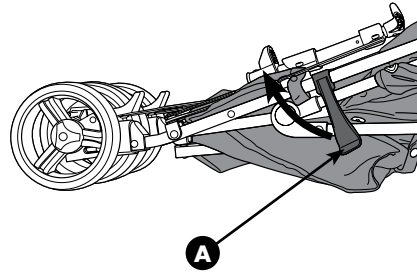

2. Raise both handles as far as they will go.

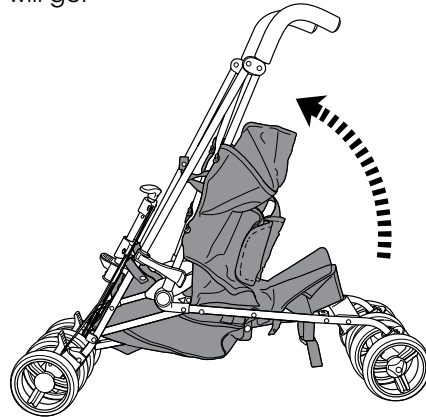


3. DO NOT try and open the stroller by forcing the handles apart. Place your foot on the frame 'LOCK' pedal (B) and push down until the frame is fully open and locked.

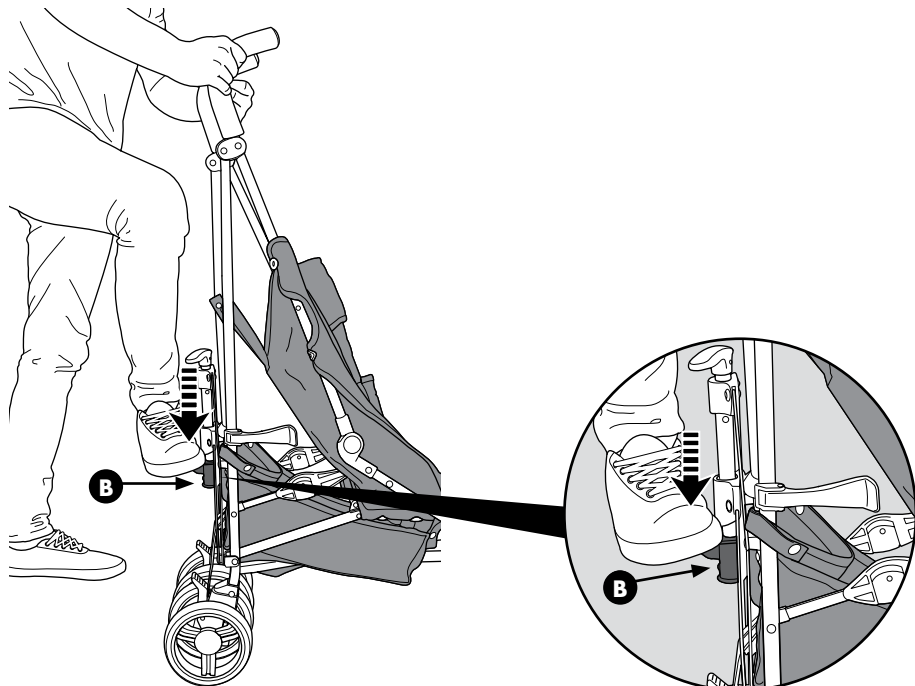

**ATTENTION:** Ensure the calf rest is down before allowing the child to get in or out.

# FRONT WHEEL ASSEMBLY

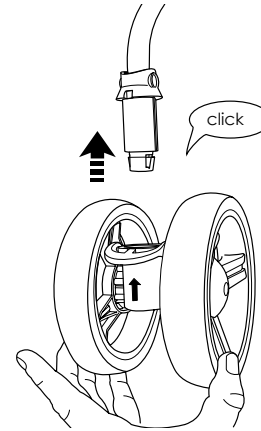


1. Align the front wheel assembly with the front axle. Push each wheel assembly firmly on until they click into place. Pull the front wheel to make sure it is attached.  
NOTE: Check the wheel to make sure it is secure by pulling it.

**NOTE:** Wheels are designed not to be removed.

# USING THE SWIVEL/LOCK FUNCTION

**WARNING:** Always lock the swivel wheels when using the stroller on rough surfaces.

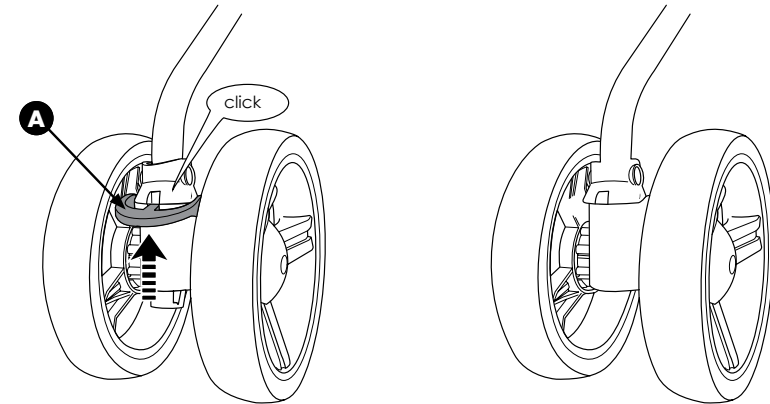


1. To lock the wheel: Position the wheel in the trailing position with tab (A) pointing forwards and lift the swivel lock tab (A) up.

2. To allow the wheels to swivel: Push the swivel lock tab (A) downwards.

## USING THE BRAKES

**WARNING:** THE BRAKES MUST ALWAYS BE ON WHEN MAKING ADJUSTMENTS, e.g. taking the child out, putting the child in or letting go of the handlebars.

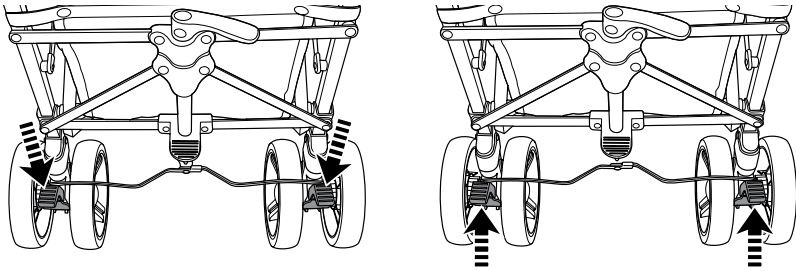

1. Press down on either of the brake levers with your foot to apply the brake. Give the stroller a push back and forward to make sure the brakes are engaged before letting go of the handles.

2. Pull either of the brake levers up with your foot to release the brakes.

**WARNING!** Make sure you are holding the handles before releasing the brakes.


## USING THE HARNESS

Lock buckle parts (A to B) (C to D) together until secure click is heard and you can adjust the belt length to fit your baby. Press the buttons to release the harness.


**WARNING:** Use this harness at all times.

Both the shoulder straps and the waist/crotch straps may be adjusted using the sliding buckles on these straps.

**WARNING:** Many unrestrained children suffer from injuries falling from strollers.

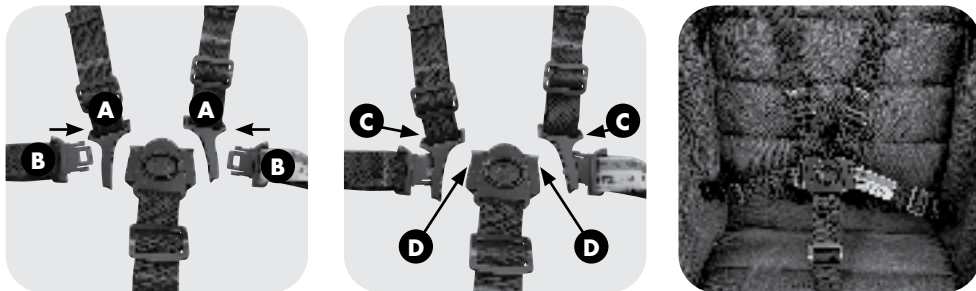

## ADJUSTING THE BACKREST

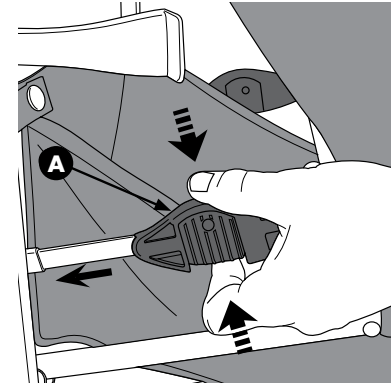


**TO RECLINE:** Squeeze both of the recline mechanisms on either side of the stroller (A) and push them backwards. The seat has 5 positions of recline.

**TO RAISE:** Simply push up/lift the backrest.


## ADJUSTING THE LEG REST

**ATTENTION:** Ensure that the leg rest is folded down when the child is getting in and out of the stroller. Failure to do so may cause damage to the mechanism.

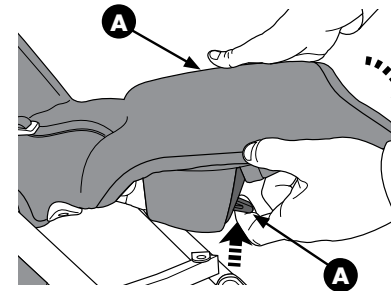

To lower the leg rest, press the buttons (A) on each side of the leg rest and lower the leg rest.

**ATTENTION:** When the leg rest is up, it allows the child to lie in a more horizontal position when resting or sleeping. It is not designed to take the weight of the child climbing in and out of the stroller.

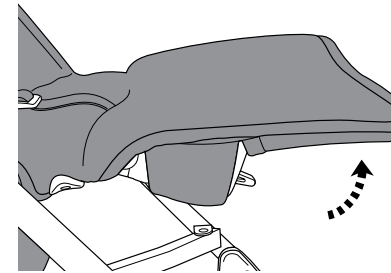


To raise the leg rest simply lift the calf rest upwards (there is no need to press the buttons whilst raising the leg rest).

# ATTACHING / USING / REMOVING THE HOOD



1. Line up the hood clips so that the hole (A) lines up with stud (B) on the chassis and push the clip onto the stud (B)



2. Secure the hood fabric to the stroller using Velcro tabs; repeat on opposite side of hood.

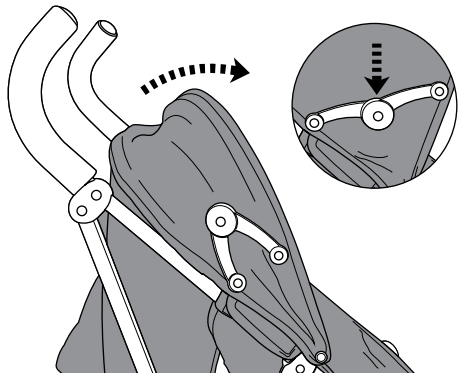


**TO OPEN:** Pull the front of the hood forwards.

# FOLDING THE STROLLER


**WARNING!** Fold the hood back before attempting to fold the stroller. Failure to do so may damage the hood.

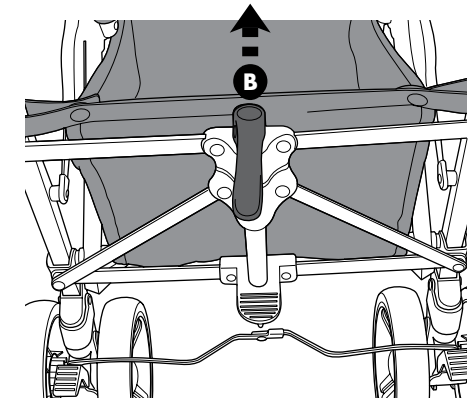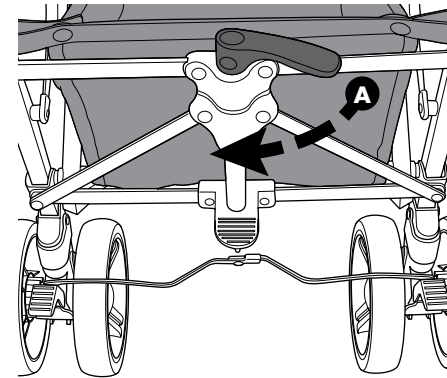

Pull the plastic part upwards (A), and pull the second lock (B) downwards as shown.

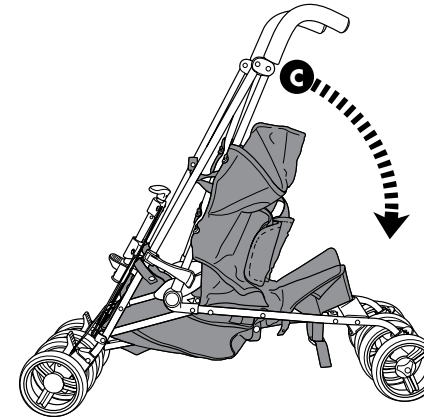

Hold both the handles and gently fold the stroller forwards (C) until it is fully folded. Do not force it down. If it does not go down then check for obstructions and repeat actions in steps 1 above.

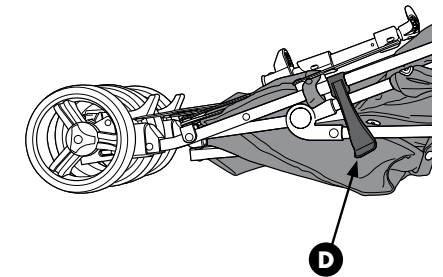

Secure the storage lock (D).

# CARE AND MAINTENANCE

This product requires regular maintenance:

- Inspect the locking devices, brakes, harness assembly, catches, seat adjustments, joints and fittings to ensure they are secure and in full working order.
- Brakes and wheels are subject to wear and tear and should be replaced if necessary. Contact customer service for information for replacement parts.
- If any part of your stroller becomes stiff or difficult to operate, ensure that dirt is not the cause. Regular use of spray lubricant (silicone based) between the components is recommended.
- Avoid over-spraying as this may encourage the accumulation of dirt. Regular lubrication of moving parts will extend the life of your stroller and make opening and folding easier.
- The seat unit, plastic and metal parts must be sponged clean with warm water and mild detergent. Always allow to dry thoroughly before using or storing.
- Do not leave the stroller in sunlight for prolonged periods as fabrics may fade.
- Never use abrasives, ammonia, bleach or spirit based cleaners.
- Always store your stroller in a dry place. Allow fabric and raincover to dry thoroughly before folding and storing.

# WARRANTY

Your Betti products come with a 12 month manufacturer warranty.

The Warranty is only valid in the country of original purchase, and for new products purchased from an authorised retailer.

Proof of purchase is required to make a warranty claim and the warranty is only extended to the original purchaser.

All components this product shall be warranted for one year (12 Months) from the date of purchase.

## **WARRANTY DOES NOT COVER:**

- Normal wear and tear
- Corrosion or rust
- Incorrect assembly or the installation of third party parts or accessories not compatible with the original design
- Accidental or intentional damage, abuse or neglect
- Commercial use
- Improper storage/care of the unit
- Beware of eBay and international website sales.
- A receipt from an authorised retailer is required to fulfill a warranty claim.

If you no longer have a receipt, we recommend contacting the authorised retailer that you purchased from to obtain a copy if available.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Betti

**MODEL NO.** S-175 Stroller  
Made in China



Proudly distributed by  
**The Amazing Baby Company**  
7-9 Maurice Court Nunawading Victoria 3131  
E [info@tabc.com.au](mailto:info@tabc.com.au)  
[www.theamazingbabycompany.com.au](http://www.theamazingbabycompany.com.au)